




Acer Iconia One 7 Battery Replacement

Replace the battery in the Acer Iconia One 7.

Written By: Ahmad Kayali

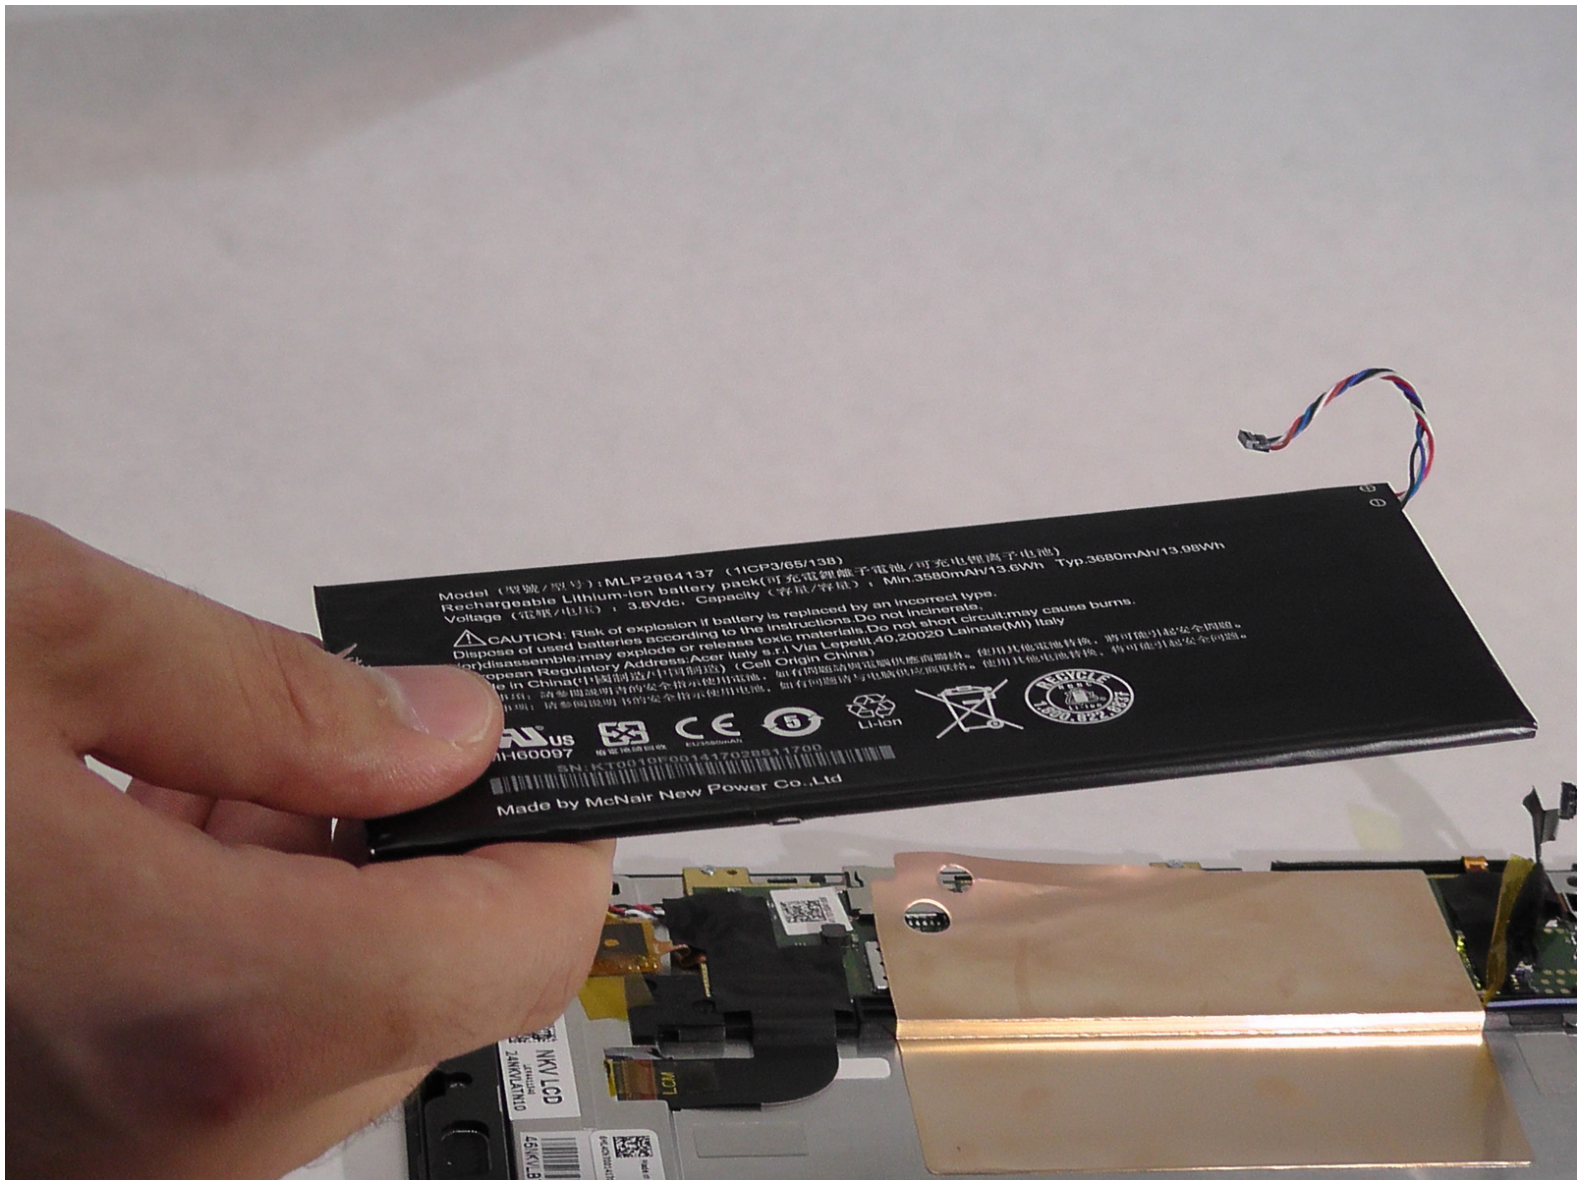

INTRODUCTION

The battery is essential to the tablet as it is the power to the entire device. One should be careful when replacing a battery because it may be harmful if broken apart. Taking apart the battery itself in this device without proper safety conditions could prove to be hazardous to ones health.


TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Plastic Cards](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Battery



- Begin at any side of the tablet.
- With a plastic opening tool, begin taking apart the back cover from the tablet by working along the edges.

 Prying the lid open can be difficult, use caution to safely remove.

 Reminder: Turn off device before this step

Step 2




- Using a plastic opening tool, separate the back cover from the main device.
- Open each side continuously to ensure all sides have been separated,

Step 3




- Turn the tablet over to locate the battery.
- The battery is black and will have a plus and minus sign at the top left.
- ⚠ Besides the parts that are mentioned in the instruction, try not to agitate other fragile components inside the device.

Step 4

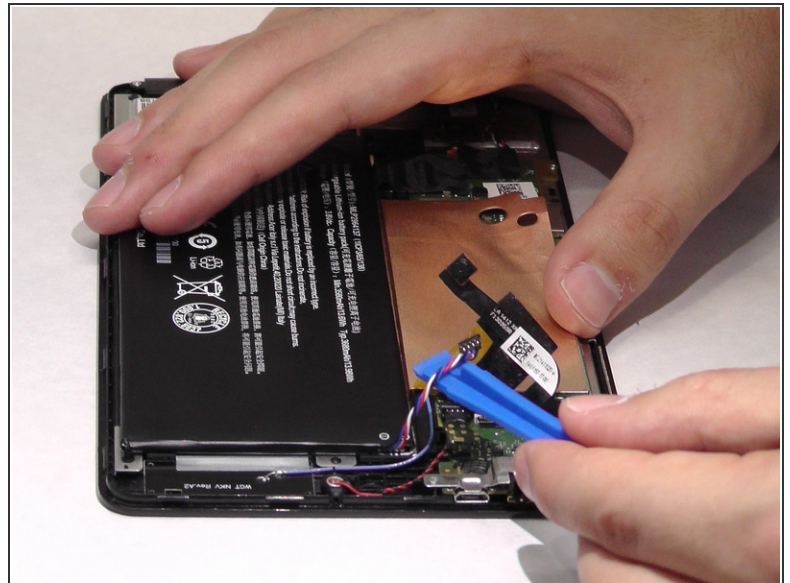

- Carefully pull back black tape slightly.
- Disconnect connection by pulling up on the wire with the plastic opening tool.

Step 5

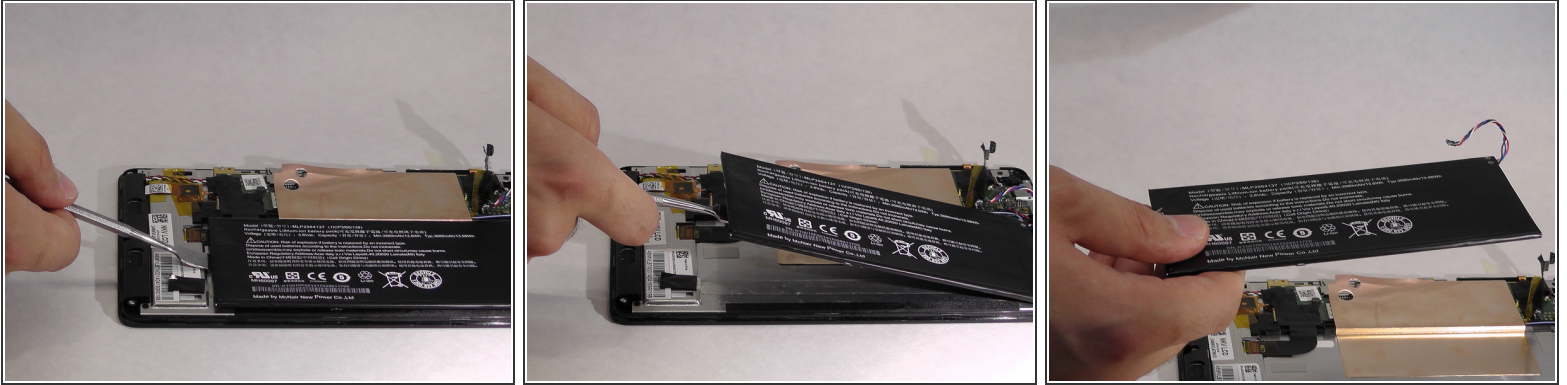

- Using a plastic card or opening pick, separate the battery from the rest of the device.

⚠ These images show the use of a metal spudger. Use a plastic card to avoid bending or rupturing the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 09:13:32 AM.